



Phil

LIL' *Phil* Grease Gun

Grease Cartridge Installation Instructions

1. Unscrew the canister from the lever assembly.

Note:

Be sure the fiber seal remains flat in the bottom of the threaded portion of the lever assembly.

2. Pull the plunger all the way to the end of its travel, twisting it to engage the tabs on the rod so that it remains extended from the canister.
 3. Remove the cartridge cap and slide the cartridge into the canister, open end first.
 4. Poke a hole in the foil-sealed end of the cartridge.
 5. Screw the canister halfway into the level assembly, making sure that the fit is loose enough to allow air to purge from the assembly.
 6. Disengage the plunger rod and push it back in all the way, purging excess air.
 7. Screw the assembled gun together tightly.
- 